



What is the multirazor?

The multirazor is a razor for all difficult to shave body regions.


Shave large body regions like back, bottom, legs etc.

With the sponge embedded "original Gillette razor blade" a secure shave is guaranteed.

With the long handle of the multirazor you can reach body regions which usually only can get shaved by another person or expensive treatments.

How does the multirazor work?


The multirazor works with an "original Gillette razor blade". Use the multirazor mainly under the shower or in the bathtub, so the shaved hair can be easily removed by water.

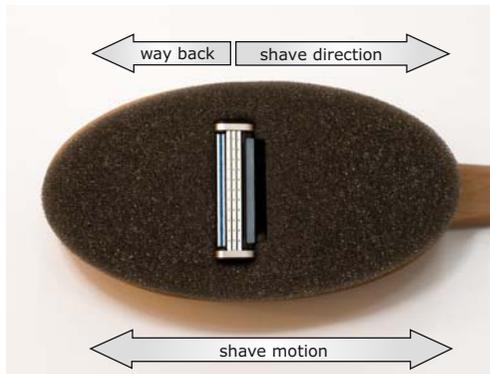

While shaving, the sponge of the multirazor should always be wet and covered with shower gel to assure optimized sliding on your skin.

While shaving, the sponge of the multirazor should always be plane on your skin. With light pressure the "original Gillette razor blade" shaves like you usually know it.

Move the multirazor with the long handle back and forth like a bathing brush. With every motion, hairs get shaved and wiped away.

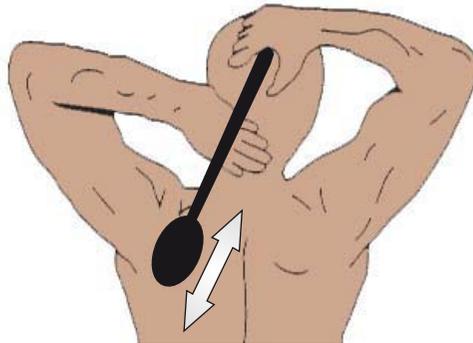

For a perfect shaving result, on difficult to observe body regions like back or shoulders, it is recommended to repeat this motion several times.

How to change the razor blade?

For a constant and satisfactory shaving result the "original Gillette razor blade" is replaceable.

To remove the razor blade, grasp it with two fingers on both sides and pull it upward. There is no need of unlocking it in a special way.



A new razor blade can be installed into the multirazor the opposite way with light pressure until you hear it engage.



It is very important only to use "original Gillette razor blades".

The following "original Gillette razor blades" can be used:

- "Gillette Mach3"
- "Gillette Mach3Turbo"
- "Gillette M3Power"

What ist to pay attention to?

The multirazor is a special kind of shaving, so there are a few facts to observe:

The shower gel covered sponge has to sit plane on your skin and the shaving motion has to be done in the direction of the multirazor handle. Sideward motion under pressure can cause little cuts in your skin.

Alike to a normal razor blade it is possible to injure your skin. So before shaving check the body region on roughness, birthmarks and pimples. These regions have to be shaved with great caution.

To guarantee a hygienic shave you should replace the multirazor with a new one ca. every six month. By way of comparison you buy a new toothbrush every three months.

Let the multirazor get dry and put it out to air after every shave.

Use the multirazor only for large body regions like back, bottom and legs. Shaving your face with the multirazor does not make sense.

Keep the multirazor away from children!

What does my multirazor-set consist of?

- 1 x multirazor-plate with razor blade bracket and sponge
- 1 x multirazor-handle with loop fastening
- 1 x "original Gillette Mach3 razor blade"
- 1 x multirazor-manual